

HAND COM CLICKER

MOUNTING INSTRUCTIONS

KIT CONTENT

2 units ADJUST ROD BY GPE

2 units HAND COMP LEVER BY GPE

2 units SAFETY SCREW



Follow the mounting instructions.

APPLICATION LIST

HONDA

CRF 250 15-23

CRF 450 17-23

KAWASAKI

KXF 450 15-23

SUZUKI


RMZ 450 15-23



Work

STEP 1: Close complete compression adjuster with screwdriver. N1 Clockwise. Note current setting COMP.


STEP 2: Open anti clockwise and count and note the total number of clicks.

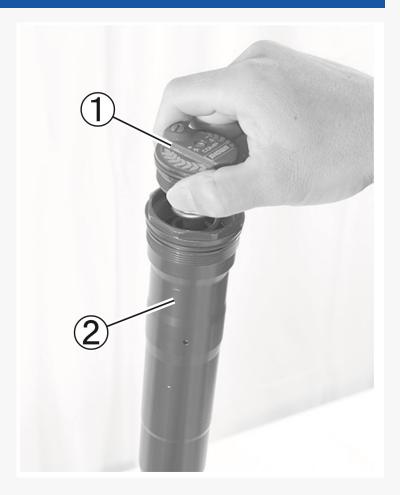


Work

With especial tools disassembly completely the compression COMP.



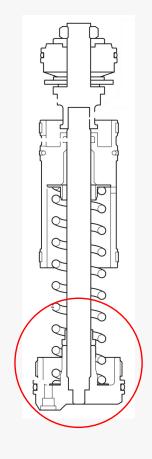

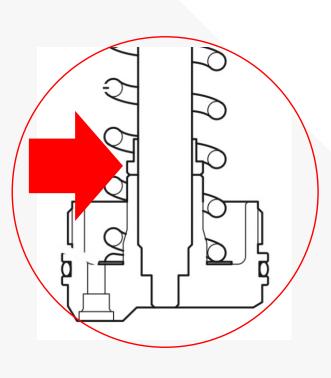

Work

Unlock completely the nut vs the top cap.




USE HOT GUN, can be safety glue applied.



Work

Remove the STD compression adjuster.

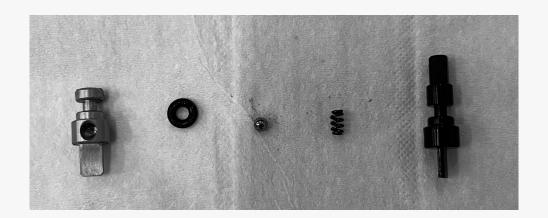

Work

Remove from the STD compression adjuster:

- O-ring
- Ball
- Spring

Install to the new ADJUST ROD B GPE.



Work

Install the new ADJUST ROD B GPE to the compression shaft.




Be sure needle shaft position is fitting correctly with the flat blade of the ADJUST ROD B.




Work

Install the fork bolt to the compression shaft.



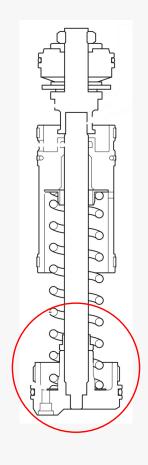


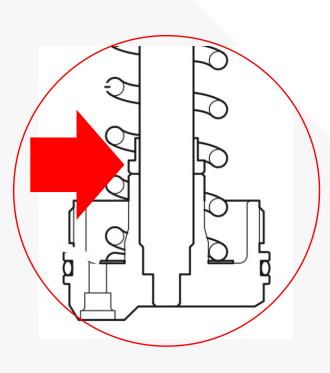

Work

Lock completely the nut vs the top cap.

TIGHTING TORQUE SHAFT NUT -> SHAFT 37.5±5N·m

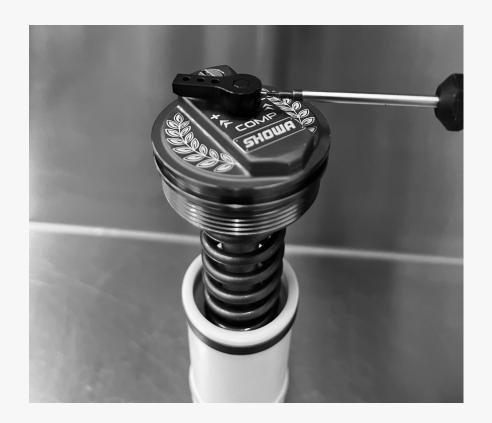

Work

Install the HAND COMP LEVER and the safety screw.



Work

Check the clicker COMP adjuster is working correctly, check total number of clicks from max closed to max open.

And set the COM setting.

HAND COM CLICKER

MOUNTING INSTRUCTIONS



VERSION: 22.1 MORE INFO: contact@showabygenuinepartseurope.com